



How To Use Lift Assist- PS1875 INSTRUCTION MANUAL

1. Use Lift Assist to raise and lower basket as shown in **Figure 1**. To allow cooking oil to drain from basket at end of cook cycle, hook Lift Assist under Winston nameplate on front of fryer (**A**).

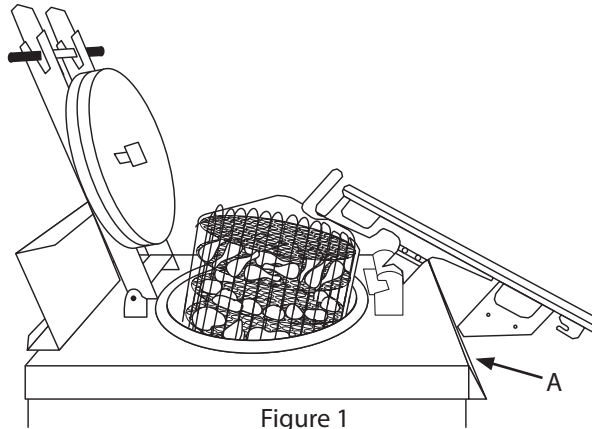

2. After emptying cooking oil from fryer (per fryer owner's manual information), use Lift Assist to pull collector from fryer as shown in **Figure 2**.

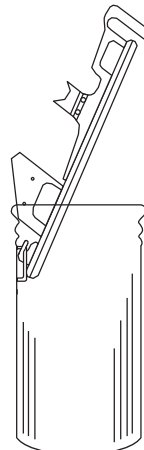

Buy Winston service parts online!
Factory direct at www.winstonparts.com