

Replace Solenoid Fuse at Front Harness

INSTRUCTION MANUAL

TOOL(S) NEEDED: • Phillips screwdriver

INSTRUCTIONS:

1. Shut off power to fryer and unplug power cord from wall outlet where possible.
2. Remove four screws to open front service panel of fryer and locate the terminals for the two solenoid wires. See Figure 1.
3. Unplug one of the terminals (either one will do). See Figure 2.
4. **CAUTION:** Hold the fuse assembly by the terminals only and not the fuse body. Damage to the internal connections may occur. Insert the fuse assembly into the terminals as shown in Figure 3.
5. Close service panel and plug in power cord.

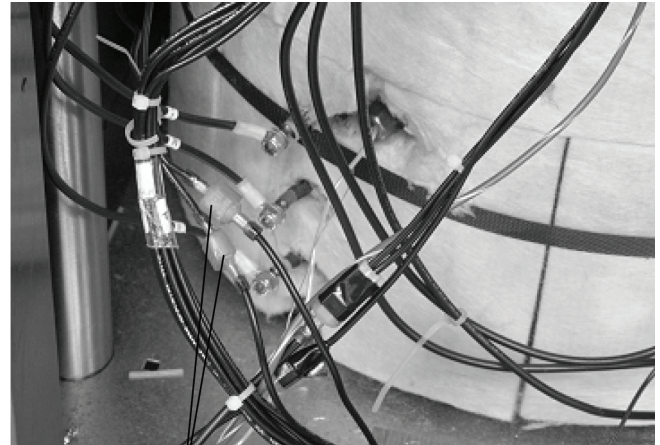


FIGURE 1

SOLENOID WIRE
TERMINALS



Figure 2

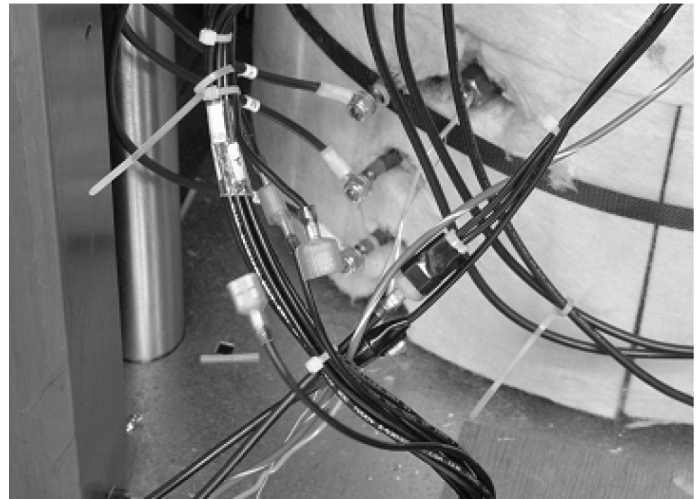


Figure 3

Buy Winston service parts online!
Factory direct at www.winstonparts.com

