


# Gasket Replacement INSTRUCTION MANUAL

## TOOL(S) NEEDED

- Drill



1. Remove door and its hardware. Make note of its original position on door.
2. Remove all screws from sides of door.
3. Pull door halves apart.
4. Remove gasket from door half.
5. Replace with new gasket by sliding into gap of door half.

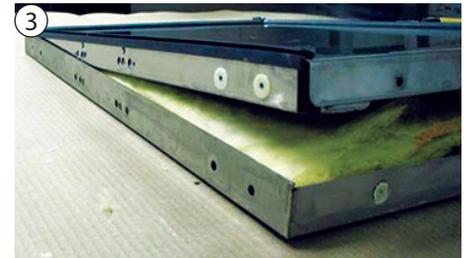

**Buy Winston service parts online!**  
Factory direct at [www.winstonparts.com](http://www.winstonparts.com)



6. Work the gasket into gap around the rest of the door half.
7. Place door halves back together making sure gasket stays properly seated while joining the two halves.
8. Re-install all screws as removed earlier.
9. Reinstall all mounting hardware into its original position and re-hang door.

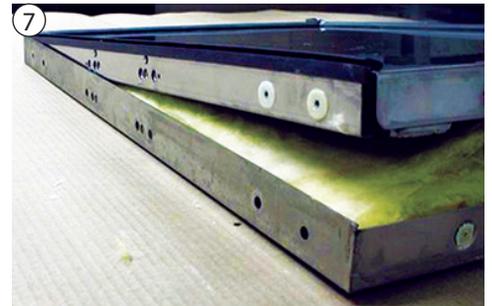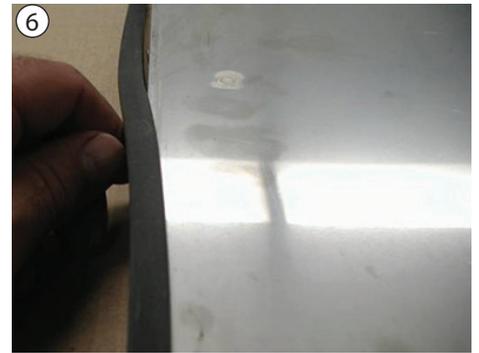

**Buy Winston service parts online!**  
Factory direct at [www.winstonparts.com](http://www.winstonparts.com)