

AC1022-2 Installation Instructions

TOOL(S) NEEDED

- Large Channel Locks or Pipe Wrench
- AC1022-2 Kit

! WARNING: Before servicing the fryer ensure that the fryer is shut off, unplugged, and the oil is drained from the pot.

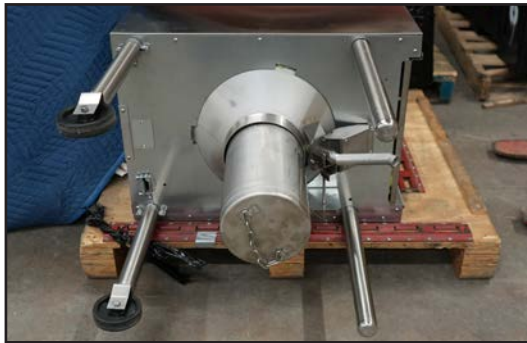


Fig.1

1. Carefully lay the fryer on its side. (Fig.1)



Fig.2



Fig.3

2. Using a large pair of channel locks or a pipe wrench, untighten the front leg. Using your hands, unscrew the leg. (Fig.2-3)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies





Fig.4

3. Remove the leg from the fryer.(Fig.4)



Fig.5



Fig.6



Fig.7

4. Repeat steps 1-3 to remove the other front leg.(Fig.5-7)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies



Fig.8

5. Locate the caster legs in the box.(Fig.8)



Fig.9



Fig.10

6. Insert the leg with caster into the leg hole and screw in hand tight.(Fig.9-10)



Fig.11

7. Tighten the caster leg using a large pair of channel locks or a pipe wrench.(Fig.11)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies



Fig.12



Fig.13



Fig.14

8. Repeat steps 6-7 for the other front leg.(Fig.12-14)



Fig.15

9. Set the fryer upright and verify that the legs are level.(Fig.15)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies