


Install Hinge Retainer PS2445

INSTRUCTION MANUAL

TOOL(S) NEEDED: • Hinge Retainer
• Phillips Screwdriver

INSTRUCTIONS:

1. Remove the top door from the cabinet by rotating door outward and gently lifting upward until it becomes unhinged.
2. Remove the two screws on the top hinge of the door. The door hinge will come loose. See diagram below.
3. Place the hinge retainer on the outside of the top door hinge with the long stem of the retainer facing **AWAY** from the cabinet and secure with the screws from Step 2.
4. Replace the door on the cabinet.

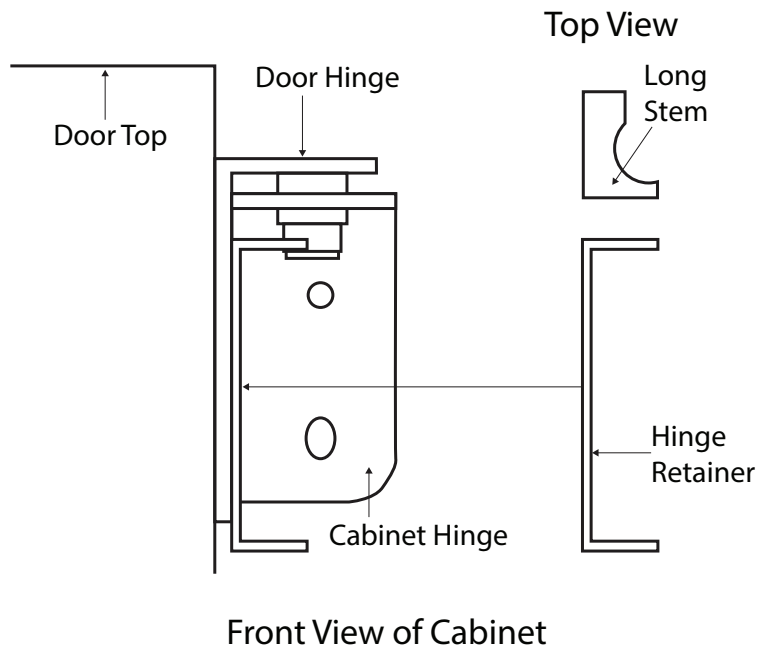

Buy Winston service parts online!
Factory direct at www.winstonparts.com