

Install 8000 Series Fryer Controller - S to C

INSTRUCTION MANUAL

1. Disconnect fryer from power source or turn circuit breaker to the off position.
2. Remove the two screws located to the left and right hand sides of the controller assembly and save for re-use.
3. Remove the metal frame from the outer edge of the controller assembly.
4. Remove the two screws from the top and bottom of the controller assembly and save for re-use.
5. Carefully extract from the front panel. (Note: Assembly may tend to stick due to gasket material on back of frame. It may be necessary to gently pry edge of assembly loose using a small screwdriver.)
6. While holding controller assembly in one hand, unplug electrical connectors from rear of assembly. (Caution: Do not allow controller assembly to hang by wires, as this may loosen electrical connections.)
7. Install small "L" bracket above top center of controller housing opening and secure with one of the screws removed in step #4.
8. Remove four screws securing front panel to fryer cabinet and allow to hang in an open position.
9. Remove two screws and nuts securing interlock switch and bracket to left-hand side of controller housing.
10. Cut wires to old speaker assembly.
11. Disconnect probe plug from bottom of controller housing.
12. Remove four nuts securing controller housing to front panel.
13. Remove controller housing from front panel and pull wiring harness out of the way. (Note: It may be necessary to pry housing from panel with a screwdriver due to silicone sealing.)
14. Position new housing onto front panel and secure with four nuts. (Note: The fryer wiring harness remains on the outside of the new housing.)
15. Position interlock switch and bracket onto controller housing and secure with two screws and nuts.
16. Plug main wiring harness, probe and ground wire into extensions from bottom of new housing.
17. Close front panel and secure with four screws.
18. Connect controller leads to receptacles in controller housing.
19. Position controller assembly into housing and secure with two screws.

Buy Winston service parts online!
Factory direct at www.winstonparts.com

