

# Replace Door Handle Nutplate PS2245

## INSTRUCTION MANUAL

**TOOL(S) NEEDED:**

- Phillips screwdriver
- Electric drill
- Food grade silicone caulk
- Pop rivet gun (preferred)
- 1/8" drill bit
- Pencil

**KIT CONTENTS:**

Nutplate  
Pop rivets (2)

**INSTRUCTIONS:**

1. Remove door from appliance by lifting up and off hinges.
2. Using Phillips screwdriver, remove all hardware from door and separate door top panel from bottom panel. Remove insulation and save for re-use.
3. Using drill and 1/8" bit, remove pop rivets securing handle nutplate to side of door panel. Note: Older models may not have a nutplate or pop rivets to be removed.
4. Remove old nutplate or existing handle mount and discard. Your door should now look similar to Figure 1. Figure 2 shows a close-up of the handle area. Your door may not have all of the holes shown in the photo. If you do not have the small pop rivet holes pointed out in Figure 2, it is recommended that you line up the new nutplate with the large holes on the door in the position shown in Figure 3. Mark the position of the small holes with a pencil where pop rivets will go as shown in Figure 3. Drill out 1/8" holes in the two places marked. If a drill and bit are not available, an alternate method is to use silicone caulk to secure the nutplate in place.
5. Secure the nutplate in position using pop rivets or silicone caulk. Reassemble door and re-attach handle

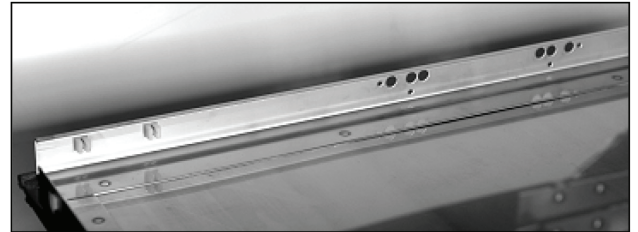


Figure 1

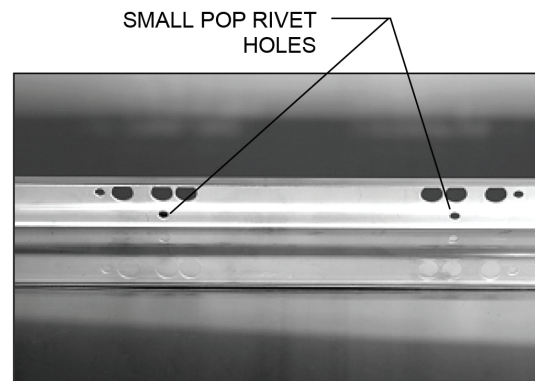


Figure 2

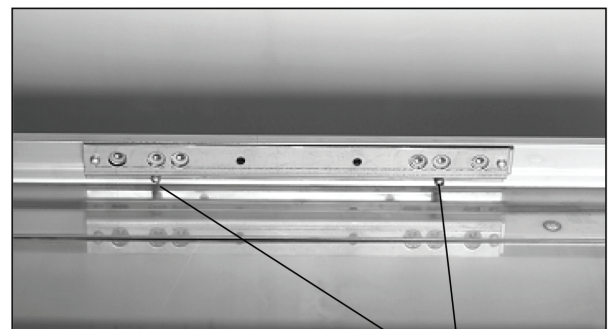


Figure 3

POP RIVETS

**Buy Winston service parts online!**  
Factory direct at [www.winstonparts.com](http://www.winstonparts.com)

