

Replace Drawer Gasket

INSTRUCTION MANUAL

TOOL(S) NEEDED: • Phillips screwdriver

INSTRUCTIONS:

1. Remove drawer from unit by lifting it up as it is pulled out. See Figure 1.
2. Using a Phillips head screwdriver, remove the two screws securing the drawer handle to the drawer front. See Figure 2.
3. Once the two handle screws are removed, the drawer front will be able to be separated from the back. See Figure 3.
4. Note the position of the old gasket on the drawer back. Make sure that when the new gasket is installed, it is positioned like the old gasket, with the flexible 'V' part of the gasket facing toward the unit (see Figure 4 for proper gasket position). Pull the old gasket off the drawer back flange and replace it with the new gasket. The new gasket will have a 1" cut in the top center for air flow.
5. Reassemble the drawer in reverse order of disassembly.

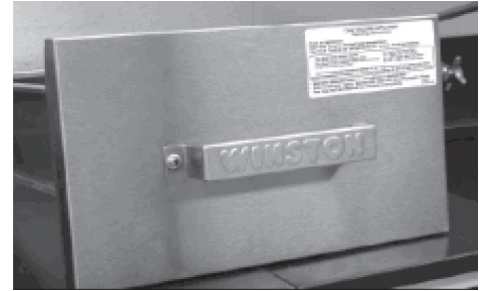


Figure 1



Figure 2

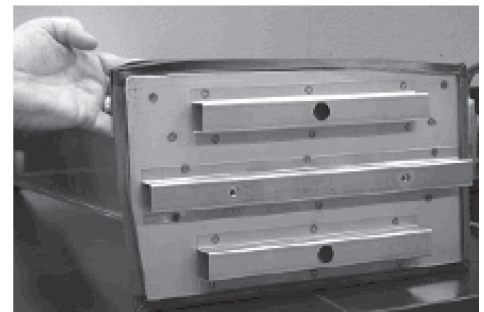


Figure 3

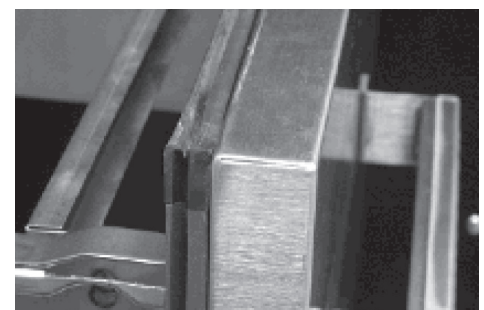


Figure 4

Buy Winston service parts online!
Factory direct at www.winstonparts.com

