



# Winston Smoker Box Owner's Guide

## WELCOME

If you have questions about your equipment, please contact your corporate office, local distributor, or Winston's Customer Care Center at 1.800.234.5286 or +1.502.495.5400, or e-mail us at [CustomerCare@winstonind.com](mailto:CustomerCare@winstonind.com).

## CONTACT INFORMATION:

Web: [winstonfoodservice.com](http://winstonfoodservice.com)  
E-mail: [CustomerCare@winstonind.com](mailto:CustomerCare@winstonind.com)  
Phone: 1.800.234.5286 | +1.502.495.5400  
Mail: 2345 Carton Drive | Louisville, KY 40299 USA

## OPERATING INSTRUCTIONS

**FLAVOR TRANSFER NOTE:** Some residual smoke flavor and aroma can be expected following use of the Winston Smoker Box.

### **CAUTION: Burn Hazard**

**Exposed Heating Element can cause injury.** Be sure the unit is turned off before loading the chip box. Allow the chip box to cool for 30 minutes before adding chips.

**NEVER** add chips while the unit is in operation.

### **DANGER: Electrical Hazard**

**Can cause serious injury or death. NEVER** attempt to cool the exposed heating element inside the chip box with water. Doing so could cause serious injury or death.

### **WARNING: Safety Hazard, Intended Use**

**Can cause serious injury or damage to equipment >> Supervise untrained, young, or handicapped persons.**

1. This equipment is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the equipment.
3. This equipment is intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.

1. Place dry or water soaked chips into the chip box covering the heating element completely. **NEVER** pour water directly into the chip box.

### **CAUTION: Burn Hazard**

**Can cause injury.** Chip Box will be hot to the touch during operation. Use caution when handling the Chip Box to prevent potential burns.

2. Plug the chip box power cord into the power box and tighten (**Figure 1**).
3. Plug the power box into a 120 volt, 15 amp dedicated circuit.
4. Place the chip box on a sheet pan and insert the pan into the bottom of your oven (chip box power cord will hang outside the door during operation).
5. Use the timer dial on the power box to select the desired amount of smoking time (in hours). The green LED Indicator will light up indicating the smoking process has begun.
6. The chip box should begin smoking within 10 to 15 minutes.

### **DANGER: Electrical Hazard**

**Can cause serious injury or death. NEVER** attempt to cool the exposed heating element inside the chip box with water. Doing so could cause serious injury or death.

7. When the timer expires, the chip box may be removed from the oven, and **MUST** be allowed to cool for at least 30 minutes before use.

### **DANGER: Electrical Hazard**

**Can cause serious injury or death.** Do not attempt to service this equipment unless you are a licensed electrician or trained servicer.

If an electrical shock is felt when touching equipment, shut off power immediately (either pull power cord or turn off circuit breaker) and call a trained servicer for repair. Failure to do so could result in serious, potentially fatal injuries. **ALWAYS** unplug the equipment when it is not in use.





# Winston Smoker Box Owner's Guide



Figure 1

Tighten the chip box power cord by slowly rotating the fitting on the end of the power cord in a clockwise motion.


## CVap INSTALLATION INSTRUCTIONS

1. Install included mounting bracket on smoker power box using included screws.
2. Remove front screw from the top cover of the oven on either side and replace screw in conjunction with mounting bracket (Figure 2).



Figure 2

## COMPONENT IDENTIFICATION

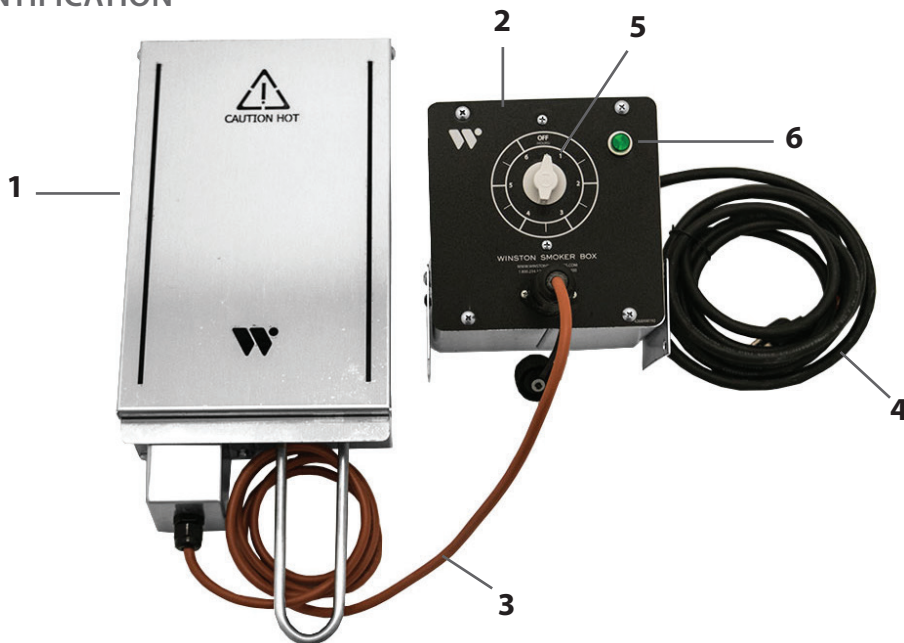

1. **Chip Box** - Smokes soaked or dry wood chips.
2. **Power Box** - Main control panel, powers the unit.
3. **Chip Box Power Cord** - Connects the chip box to the power box.
4. **Power Box Power Cord** - 120v 15 amp power cord.
5. **Timer Dial** - Allows user to set desired time in hours (1 - 6 hours).
6. **LED Indicator** - Lights up to indicate when smoking has begun.

## CLEANING INSTRUCTIONS

1. Unplug the smoker box and allow it to cool.
2. Apply food grade degreasing agent to the smoke chip box only.
3. DO NOT attempt to clean the smoker power box with cleaning agent.
4. Use degreasing agent as directed.

**CAUTION: High Temperature Hazard**

Can cause damage to equipment. Do not leave the operating chip box on any surface that can melt or damage due to high temperatures.

**CAUTION: Ventilation Hood Required**

The Winston Smoker Box is designed to operate under a ventilation hood. Failure to do so can cause smoke to build up and cause serious injury.

