




Probe Guard FryerINSTRUCTION MANUAL

TOOL(S) NEEDED • Phillips screwdriver

INSTRUCTIONS:

- 1. DANGER: Turn off electrical power, disconnect electrical power supply, drain shortening from fryer and allow fryer to cool. If fryer is electrically "hard wired," **CIRCUIT BREAKER MUST BE OFF.**
- 2. Position probe guards as shown in **Figure 1** below.
- 3. Attach the guards to the top two rows of heaters (see Figure 2).

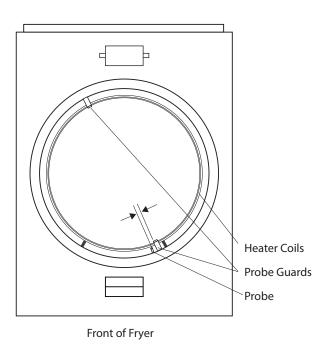

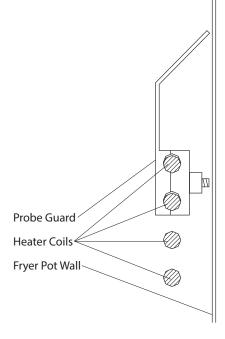


Figure 1 Figure 2

Buy Winston service parts online!

Factory direct at www.winstonparts.com

