

Install Ferrite Bead Spike Protection

INSTRUCTION MANUAL


TOOL(S) NEEDED: • Philip's screwdriver
• Flat-head screwdriver

KIT CONTENTS:

(3) Ferrite beads

INSTRUCTIONS:

1. Unplug appliance from wall or turn off circuit breaker.
2. Gain access to service area of appliance where power cord attaches to either a contactor or power switch inside the appliance.
3. Disconnect all power cord leads, except ground wire, from either contactor or power switch. Make sure to note where wires were connected.
4. Wrap wires once around ferrite beads as shown in photo. Be sure to keep the beads close to each other and as close to contactor or switch as possible.

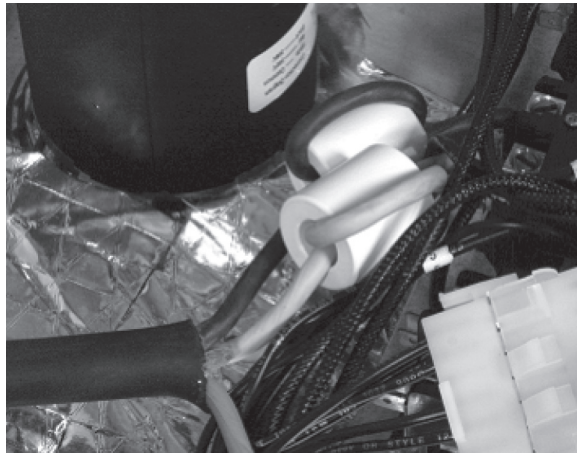

5. Reconnect wires to contactor or switch in same position that they were originally connected.
6. Replace service panels, place appliance back into service and test for proper operation.

Buy Winston service parts online!
Factory direct at www.winstonparts.com