

Placing Zip Ties on Probe Connectors

INSTRUCTION MANUAL

TOOL(S) NEEDED: • Zip Ties

INSTRUCTIONS:

This document illustrates the proper way to tie the zip ties onto the probe connectors to make sure that they do not come loose in the field.

1. Ensure that the probe connectors are solidly connected before placing the zip ties on the probe connector.
2. Place two zip ties around the probe connector making sure that they are positioned underneath the connector latches as shown in **Figure 1** below.
3. Make sure that the zip ties are as tight as possible before cutting off the tail of the zip tie.
4. Check the connector to make sure it is tightly in place by trying to pull the connectors apart.

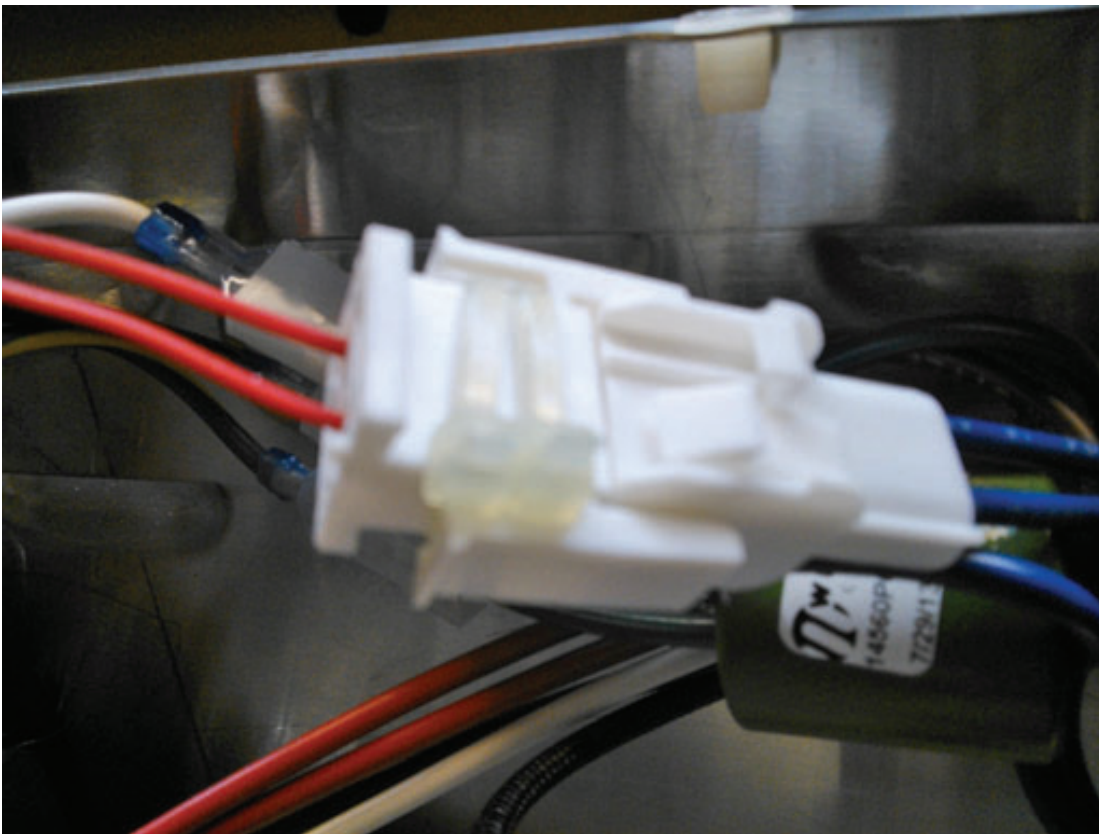


Figure 1: Two zip ties on the probe connector.

Buy Winston service parts online!
Factory direct at www.winstonparts.com