

AC1019 & AC1020 Installation Instructions

TOOL(S) NEEDED

- 1/4" Wrench
- 5/16" Wrench



Fig.1



Fig.2

1. Unbox the AC1019 Top kit, Ensure you have the hardware and the plugging tool bracket. Remove the protective film. Locate the UL sticker, and place on the left inside corner as shown. (Fig.1-2)



Fig.3



Fig.4

2. Place the plugging tool bracket onto the top and align the four holes. Insert (4) screws. (Fig.3-4)



Fig.5



Fig.6

3. Using a 1/4" & 5/16" wrench, Tighten the screws down using the provided acorn nuts. (Fig.5-6)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies

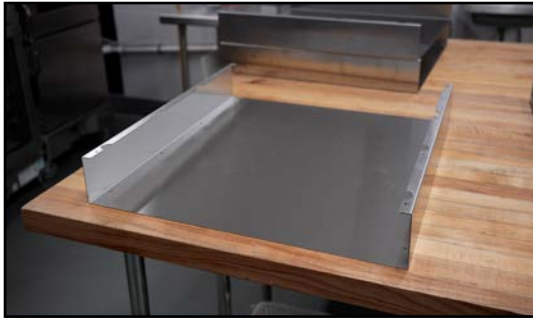


Fig.7

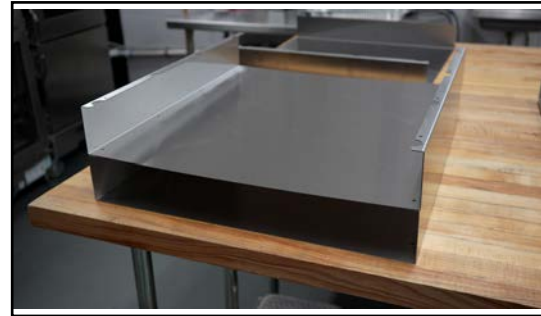


Fig.8

4. Unbox the AC10120 shelves and peel the protective film. Place one shelf on top of another. Ensure the front edge is flush and the holes line up. Shelf may have to be reversed to align holes. (Fig.7-8)



Fig.9

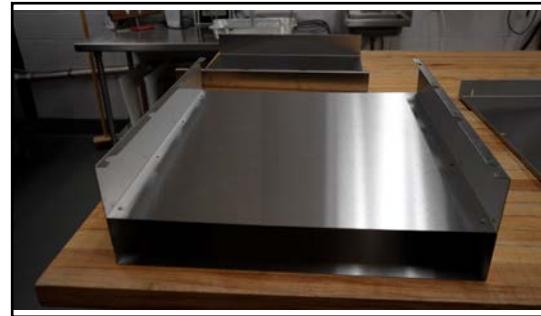


Fig.10

5. Using a 1/4" & 5/16" wrench, attach the two shelves together with the provided (8) screws and nuts. (Fig.9-10)



Fig.11



Fig.12

6. Repeat step 5 & 6 for each shelf purchased. Finally attach the AC1019 to the stack of shelves, using the provided hardware. (Fig.11-12)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies



Fig.13



Fig.14

7. Ensure that the fryers are 23" apart. If permanently mounting the shelf kit, loosen the three screws on the sides the shelf unit is being placed.. (Fig.13-14)



Fig.15



Fig.16

8. Set the shelf unit between the two fryers, resting the shelf ledge on each top. Ensure the loosen screws slide into the slots. Tighten the screws. (Fig.15-16)



Fig.17

9. Place plugging tool, scarper and brushes into holders. Filter paper can be placed on the shelves. (Fig.17)

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies