

## AC1018,1023, 1024, & 1025 Drawer Trim Kit Instructions

### TOOL(S) NEEDED

- Phillips Screwdriver


Drawer Trim Kit Wall Cutout Dimensions:

AC1018 - D1 - 28"w x 18"h


AC1023 - N1 - 19"w x 18"h

AC1024 - D2 - 28"w x 27"h

AC1025 - N2 - 19"w x 27"h

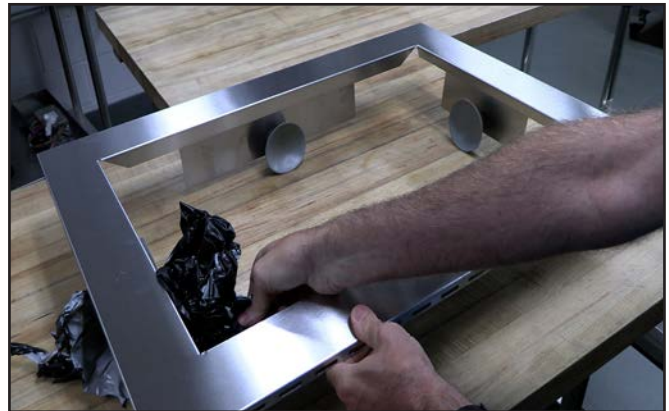

1. Peel the film from the trim kit.

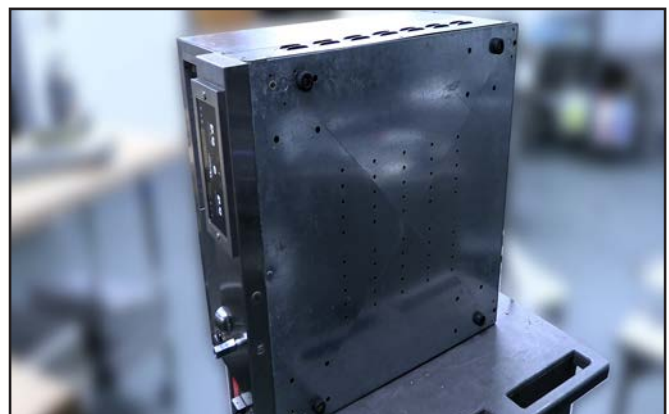

2. Remove the drawer and set the unit on it's side.

**For Winston service parts, accessories, and supplies online!**  
[foodservice.winstonind.com/parts-supplies](http://foodservice.winstonind.com/parts-supplies)



3. Using a Phillips screwdriver, loosen the two front bumper feet.




4. Using a Phillips screwdriver, remove the front middle screw.





5. Carefully slide the trim piece onto the drawer unit. Ensure the suction cups are not folded under.

**For Winston service parts, accessories, and supplies online!**  
[foodservice.winstonind.com/parts-supplies](http://foodservice.winstonind.com/parts-supplies)



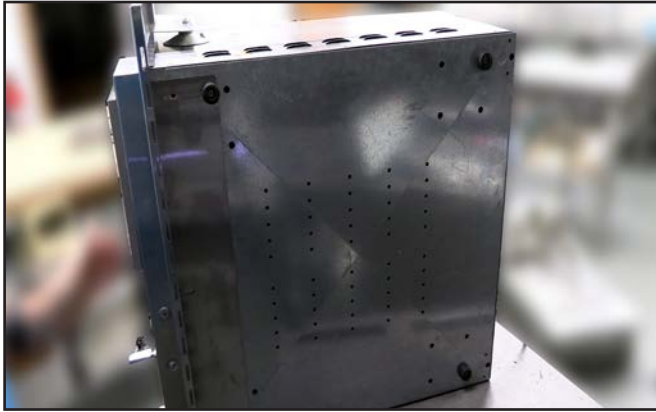

6. Ensure the bumper feet are in the bottom slots and that the trim is flush all around the front.

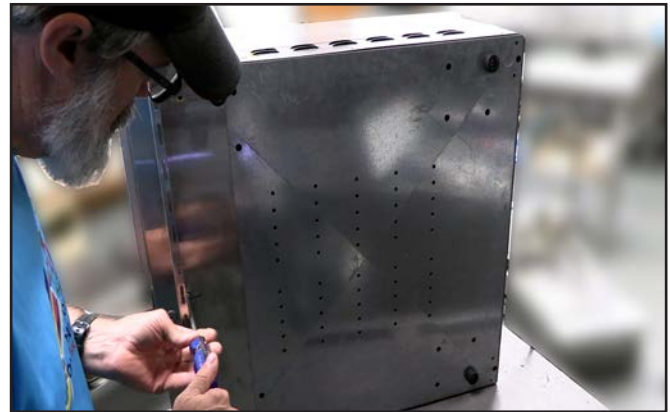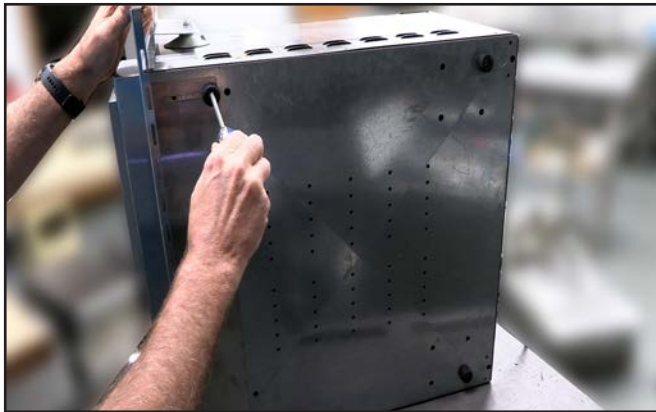

7. Using a Phillips screwdriver, tighten the bumper feet. Replace the front middle screw.



8. Place the drawer unit into the opening and replace the drawer.

**For Winston service parts, accessories, and supplies online!**  
[foodservice.winstonind.com/parts-supplies](http://foodservice.winstonind.com/parts-supplies)