

Installing the SV1294-4 -4" legs onto the HBB Drawer Bottom


TOOL(S) NEEDED

DANGER: Electrical Hazard


Power off and unplug the unit before installing the SV1294-4 kit.

Drain all the water from the unit before installing the SV1294-4 kit.

**** Ensure the drawer unit has the correct bottom. All units made after June 23,2025, have the universal bottom. If the unit was made before that date, a SV1302 or SV1303 Universal bottom must be installed first.****

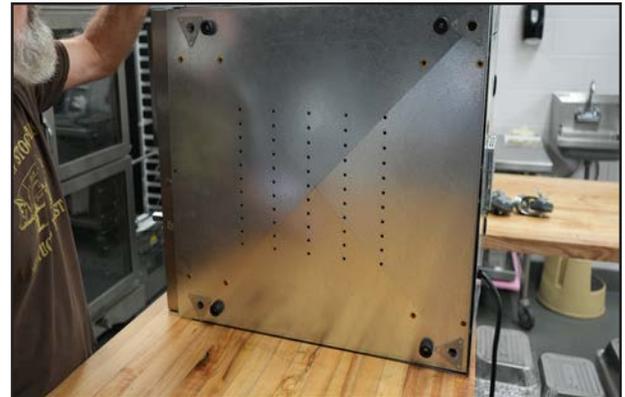


1. Remove the drawer (s). Place the unit on it's side.

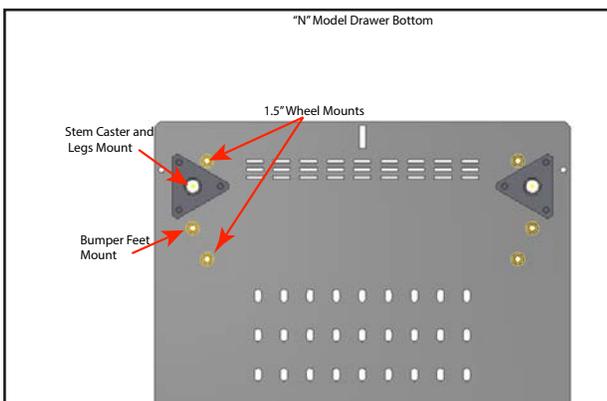

2. Locate the leg mounting holes on the drawer bottom. Carefully thread the legs into the four mounting holes.

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies

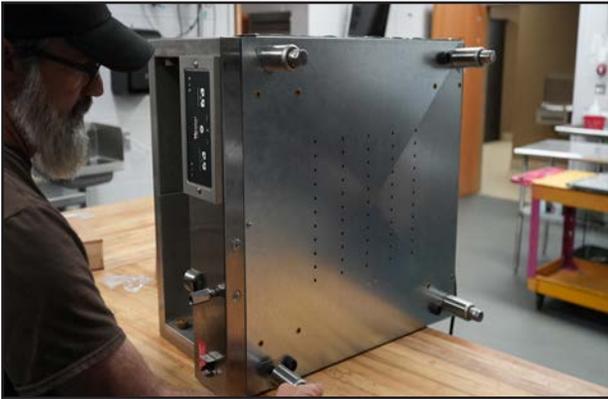

3. Ensure that all four legs are tight and not cross threaded. Flip the unit onto the legs.



4. Replace the drawer(s).

For Winston service parts, accessories, and supplies online!
foodservice.winstonind.com/parts-supplies