Lunch Rush Simulation

(*11:00 AM – 2:30 PM)

Winston LP56



No mid-rush clean-outs needed.


Cook Continuously



from 11:00 AM - 2:15 PM

HP PFE-500



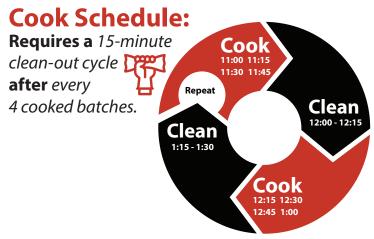

Continue cooking every minutes

15 minute clean cycle after every 4 batches





