


## Assemble Tray Cart - PS1682 INSTRUCTION MANUAL

- TOOL(S) NEEDED**
- Phillips screwdriver #2
  - 7/16" nut driver

**INSTRUCTIONS:**

1. Install deflectors (A). Using a Phillips screwdriver, remove the four screws (B) at the top inside walls of cart. Align holes on deflector with holes on inside walls of cart and re-fasten screws securely.
2. Install basket hanger (C). Using the 7/16" nut driver, remove the four acorn nuts (D) at the top outside flanges of cart. Place the hanger on the cart guiding slots on hanger over studs on cart. Secure hanger in place with acorn nuts.

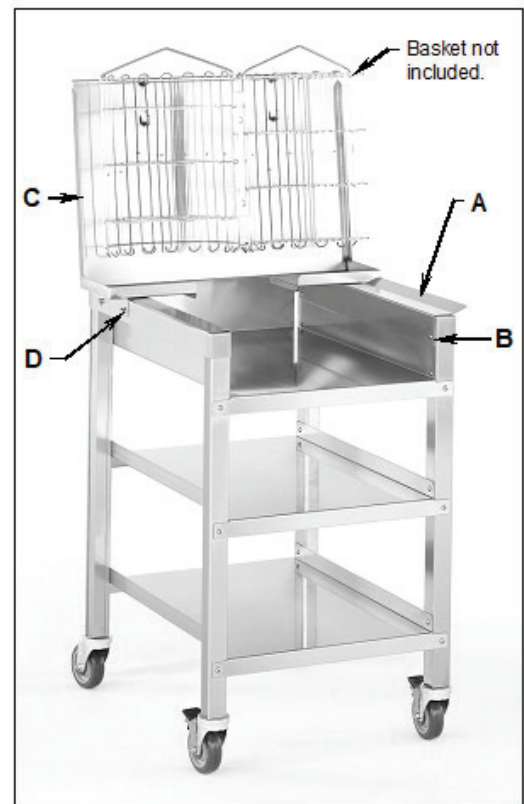

**Buy Winston service parts online!**  
Factory direct at [www.winstonparts.com](http://www.winstonparts.com)