

Retrofit CVap 22 Size Appliance Top with Power Cord INSTRUCTION MANUAL

TOOL(S) NEEDED: • 3/8" wrench or socket • Philip's screwdriver • Pliers
• 11/32" wrench or socket • Wire cutters

KIT CONTENTS:

- (1) Top
- (1) Top Interior Bracket
- (1) Cord Bracket
- (1) Strain Relief
- (1) 1/2" Screw, Plastic Grommet
- (2) 3/4" Self Tapping Screws

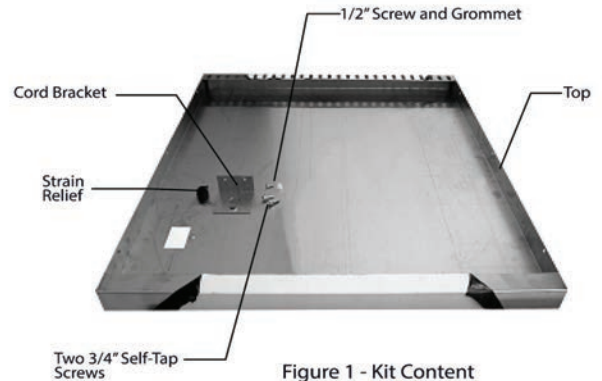


Figure 1 - Kit Content

INSTRUCTIONS:

1. Unplug appliance or turn off circuit breaker to appliance.
2. Remove existing top panel from appliance (six screws). Save screws for re-use. Discard top panel.
3. Using 11/32" wrench or socket, remove ground screw nuts and wires from stud on top interior bracket (**Figure 2**). Save nuts for re-use.
4. Using 3/8" wrench or socket, remove two screws securing existing top interior bracket (**Figure 3**). Save screws for re-use. Discard bracket.
5. Use new top interior bracket in place of removed bracket and secure in place with screws saved in Step #4.
6. Reattach ground wires to stud on new top interior bracket and secure with nuts saved in Step #3.
7. Attach new cord bracket to top interior bracket using two 3/4" self-tapping screws (**Figure 4**).

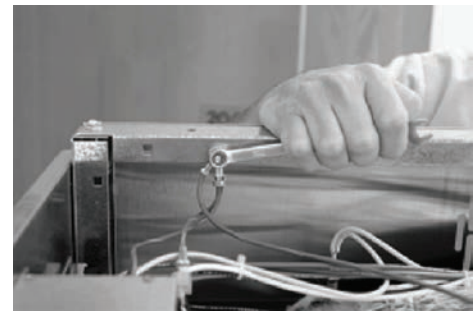


Figure 2



Figure 3

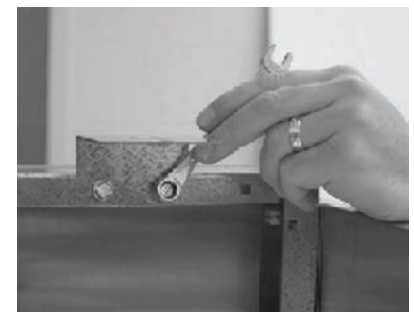


Figure 4

Buy Winston service parts online!
Factory direct at www.winstonparts.com

8. Insert grommet into small square hole on top of cord bracket (**Figure 5**).
9. Disconnect power cord from appliance wiring making sure to note or mark the wire colors for correct re-connection later (**Figure 6**). Using pliers, carefully undo the power cord strain relief and, if not damaged, leave it on the power cord for the next step (**Figure 7**). If the strain relief is damaged and unusable, remove it and replace it with the new one supplied in the kit.
10. Put end of power cord through large hole in cord bracket and, using pliers, insert strain relief into hole (**Figure 8**).
11. Re-attach power cord wires to appliance wires making sure to connect them as noted in Step #9.
12. Slip power cord through hole in new top panel and pull it until it is stopped by the strain relief.
13. Place top panel squarely on appliance and secure top panel to cord bracket using 1/2" screw provided (**Figure 9**).
14. Secure top panel to appliance using screws saved in Step #2.



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9

Buy Winston service parts online!
Factory direct at www.winstonparts.com