

Install Motor & Blade Kit - PS2051 or PS2100


INSTRUCTION MANUAL

TOOL(S) NEEDED

- Phillips screwdriver
- 7/16 wrench
- 11/32 wrench

INSTRUCTIONS:

1. **DANGER:** Disconnect the appliance from voltage supply.
2. Open top door and remove the interior fan cover by removing four stainless steel 10-32 nuts. Remove fan blade from motor shaft.
3. Remove the six screws from appliance's exterior top. Remove top.
4. Remove motor by loosening the three nuts on the mount bracket (for current version, the motor will be mounted on three weld studs).
5. For older appliances, without the three weld studs on the top interior, install new motor using the bracket shown on the left in the photo below. Be sure the Teflon seal is centered on top of the bracket. Install new motor using the bracket on the right for newer cabinets with the three weld studs on the top interior.
6. Insure motor shaft is centered in the hole not rubbing against the top interior.
7. When installing fan blade be sure to install the flat washer first, then the blade.
8. Install and tighten one ¼ -20 nut and then install and tighten the second ¼ -20 nut.
9. Plug appliance in and verify motor runs smoothly.

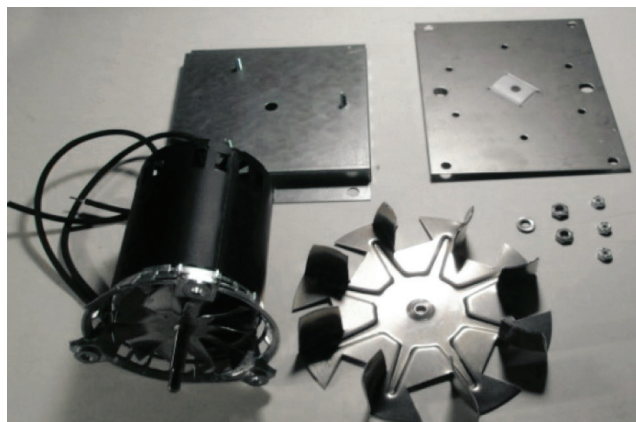

Buy Winston service parts online!
Factory direct at www.winstonparts.com

